



Dedicated Current Sensor ASSEMBLY



Smart for Greenlife!

Split-Core CT


Load Side



Step 1



Step 2

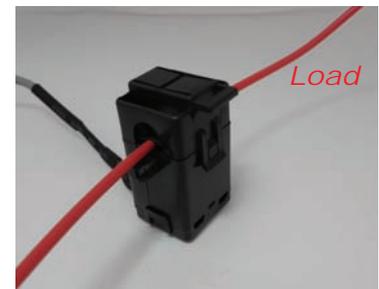

Step 3



- No need to disconnect the wire terminals
- Please follow the load direction marked on the CTs
- The measuring circuits must be the same power source and loading direction when paralleling current sensors

Meter Side

- Red wire to CT+ terminal on the meters
- Black wire to CT- terminal on the meters



Solid-Core CT



Load Side

- Shut off the power
- Disconnect the conductor from its breaker or terminal
- Put the loading wire through the solid-core CT
- Make sure the loading direction is the same as the direction marked on the CTs
- Reconnect the conductor to the breaker or terminal

Meter Side

- Red wire to CT+ terminal on the meters
- Black wire to CT- terminal on the meters

