


Ethernet to D-Bus Gateway


CC2100

Installation Guide

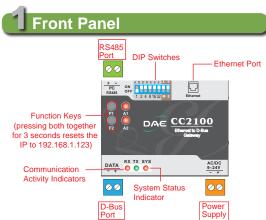


Note: Default IP 192.168.1.123

 DIP Switch




Switch	Description	
1-6	Address 1 to 64 (all off = 64)	
7	Α	Auxiliary (will not initiate LT network sweep)
	М	Main (initiates LT network sweep)
8	R	Connect to PC host using RS485
	Е	Connect to PC host using Ethernet


Dimensions

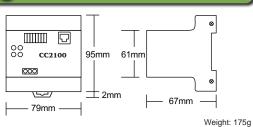


4 Wiring Diagram

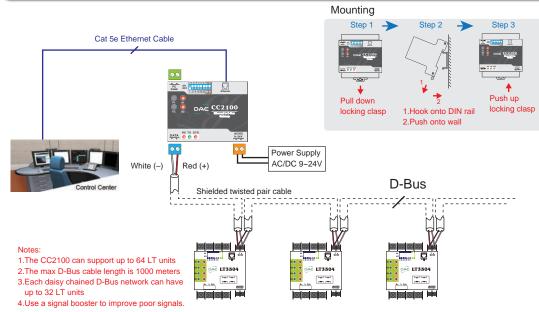

System Architecture

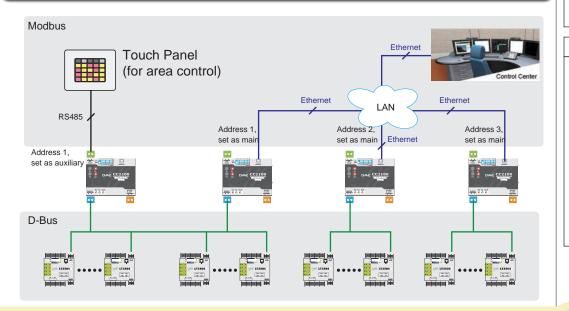

6 LED Indicators

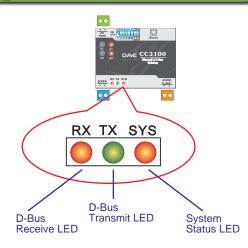

Note: The system status will flash once a second during normal operation. The other LEDs will only flash when there is activity

Safety Instructions

↑ Danger

To avoid being electrocuted, do not install or make wiring changes while the electricity is live.

Warnings

- · Install by a qualified and trained technician only.
- · Install only in accordance with the instructions given in this manual; not following instructions may damage the equipment.
- · Use wire types and sizes as per electrical regulations.
- · Avoid having oil, water, or metallic power enter the equipment.
- · Do not install the equipment in places where it will be exposed to high humidity, corrosive gas or flammable gas; otherwise, electric shock, fire or explosion may result.

