

**WSC500** 

Installation Guide

### Warnings & Precautions


#### **▲** Danger


To reduce the risk of electric shock, turn off all the sources of electrical power to the device during installation or wiring.

#### **▲** Warnings

- Installed only by a qualified and trained personnel.
- Follow these instructions accordingly, otherwise damage may occur to the device.
- Follow electrical rules and regulations in the selection of wire materials and gauges.
- Avoid having oil, water, metallic powder or other foreign substances enter the device.
- Avoid using the device in the environments where it will be exposed to steam, corrosive, or flammable substances; which can cause short circuits, fires, or explosions.


# **Z** Front Panel & Terminals

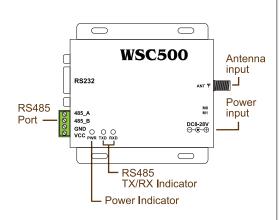

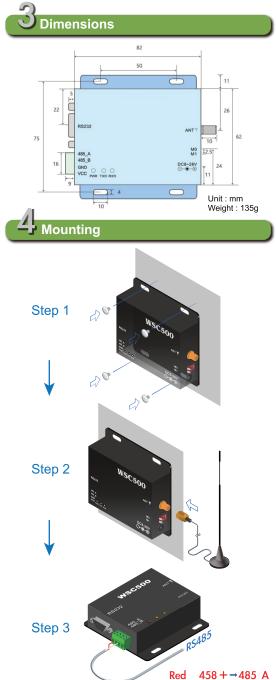

White 485 - → 485 B

# 5 Architecture

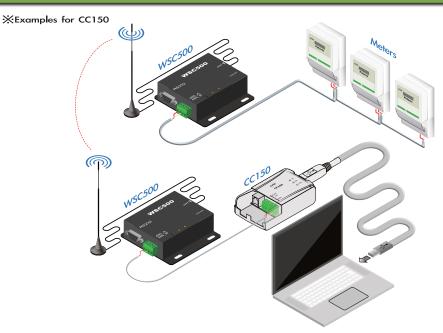

### Wiring Detail

- Please follow electrical regulations and recommendations in selecting the wire size and type.
- 2. Ensure that the wires are making good contact with the terminals and have been screwed securely.
- 3. Terminals can accept wires with size of no more than 2.0mm<sup>2</sup>.



## RS485 Cable Detail

- Use UL2464 shielded twisted stranded copper pair, 22-24 AWG recommended.
- 2. Terminate wire ends with cord end or blade lugs.
- Ensure that the wires are screwed tightly to their corresponding terminals.
- 4. Ensure that the positive and negative polarities are correct

RS485 Cable Detail:

